


ASSEMBLAGE INSTRUCTIONS

1 - Place pointers (8) on the legs (9).

2 - Assemble the wind-breakers set joining the bottom (1) the laterals (2) by means of pins (3).

3 - Assemble the wind-breaker on the tray (4) fixing the lateral tongues (5) onto clips (6). Strap the laterals with the two spit supports (7).

Indústria e Comércio de Barracas Capri Ltda.
Rua Neuchatel, 348 - V. Friburgo - CEP 04781-030
São Paulo - SP - Tel.: (11) 2161-0666
CNPJ: 05.459.647/0001-08

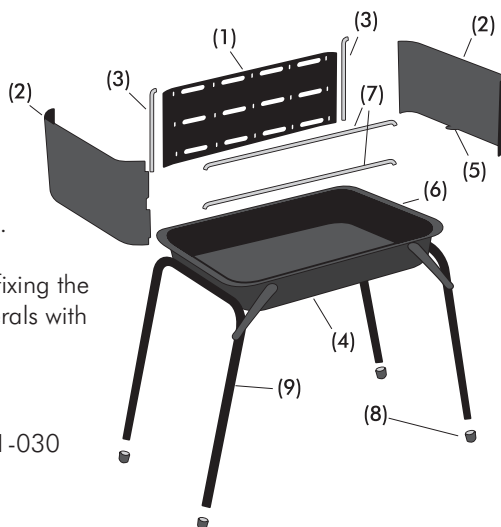

www.capriweb.com.br - e-mail: sac@capriweb.com.br